

**Design Engineering, Inc.**

604 Moore Road  
Avon Lake, OH 44012



*THERMAL TUNING PRODUCTS*

**Installation Instructions**

**DEI LED Lite'N Boltz™**


PART NO. 030301 through 030311

KIT CHECKLIST	
2	Lite'N Boltz

NOTE
Great for motorcycles where space is limited!

**DIRECTIONS**

- 1 - Disconnect vehicle battery before starting.
- 2 - Remove hardware and old bolts from license plate.  
Feed the Lite'N Bolt wires through existing plate holes. On back, feed the Lite'N Bolt wires through the center of the nylon nut and carefully tighten. Make sure wiring harness or 12V source can be accessed prior to mounting plate to ensure connections.
- 3 - Polarity of the wires are specific. Connect the wires of the Lite'N Bolts to the original wiring. Red wires are positive (12V) and black wire is designated for grounding.
- 4 - Seal any exposed wires with electrical tape and reconnect batter.

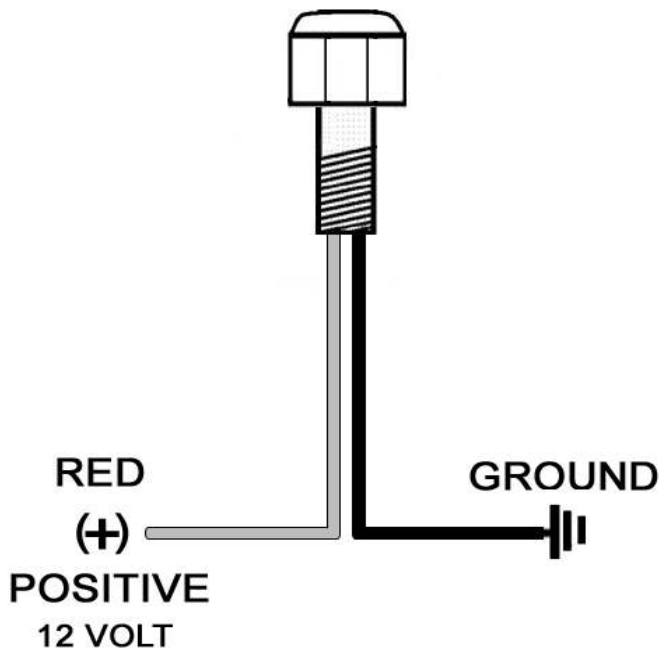

**Design Engineering, Inc.**

604 Moore Road  
Avon Lake, OH 44012